

AS7500 What's New:

Ambidextrous Mouse

Mouse pads are located on either side of the monitor for user comfort.



2-Side Canister Layout

Canisters distributed on both sides of machine using friction hinges for easier filling and use.



Smoother Dispenses

Less pulsation and reduced noise even when dispensing at fast speeds.



New Alignment LEDs

High-visibility 16-LED alignment array helps you quickly and accurately position cans and pails for faster dispensing and fewer mistints.



New Slide Shelves

Built-in 5-gallon, folding 1-gallon, and pull-out quart/sample shelves allow you to queue large orders while providing better ergonomics.



Nozzle Closer - Open


When the DPI nozzle is dispensing or purging, the nozzle closer will move to an Open position, which clears the cup from the nozzles allowing the colorant to be dispensed into the container below.



Nozzle Closer - Catch

In the Catch position, the nozzle senses the environment and will automatically move into a slightly open position if it senses a high enough dew point.

This is normal and is not an issue.

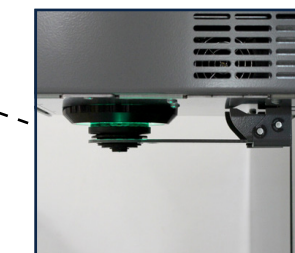

Nozzle Closer - Sealed

If the nozzle senses a dry environment (low dew point), it moves into the sealed position. In this position, the nozzle is sealed from the surrounding environment, to prevent the nozzle from drying out.



No Sponge and Water

New nozzle cup does not require sponge and water for maintenance.



Reset Button

Reset button for the AS7500 can be conveniently found on the lower center panel at the front of the machine.

50% Lower Power Consumption